



Style#
551



EMBROIDERY WASH AWAY

Sol-U-Film™

WASH-AWAY EMBROIDERY STABILIZER

Sol-U-Film™ adds body and support during stitching. When the work is done, simply submerge project in water. This stabilizer dissolves away easily and cleanly, leaving no trace on either side of project.

GENERAL DIRECTIONS:

How to Use as a Stabilizer

1. Secure Sol-U-Film™ underneath fabric using a hoop or pins.
2. Stitch desired area.
3. Upon completion of stitching, gently tear or trim away excess Sol-U-Film™. To remove all traces of the stabilizer, submerge project in any temperature water for 30 seconds to 2 minutes, then iron dry using a press cloth.



Alternative Removal

- Iron project between two damp paper towels or press cloths.

TIPS:

- For a liquid stabilizer or temporary adhesive, dissolve 1 yard of Sol-U-Film™ in 8 ounces of water and brush onto fabric.
- For stronger stabilization, iron 2-3 layers together with a press cloth and dry iron.

PELLON PROJECTS:



Project: Heart of My Heart Towel
Designer: Alexandra Henry
Level: Beginner

Add a touch of love to your powder room with this beautiful embroidered hand towel. Get the complete pattern and other project ideas at www.PellonProjects.com

ADDITIONAL PROJECT IDEAS:

Use Sol-U-Film™ for projects in:

- **Crafts & Home Décor:** Monogramming, quilt templates, lace work and decorative stitching.

Fiber Content:

100% PVA (Poly Vinyl Alcohol), Acid Free

Care Instructions:

100% Water soluble, any temperature

For more information go to www.pelloninstructions.com

Free projects using this and other Pellon® products at www.PellonProjects.com or call 1-800-223-5275.



Serie#
551



BORDADOS SOLUBLES

Sol-U-Film™

ESTABILIZADOR SOLUBLE DE BORDADO

Sol-U-Film™ agrega firmeza y cuerpo al momento de bordar. Al terminar, sumerja en agua la pieza bordada para retirar el exceso del estabilizador. Este estabilizador se disuelve fácilmente y no deja rastro en la tela.

DIRECCIONES DE USO:

Para Aplicación como Estabilizador

1. Asegure Sol-U-Film™ debajo de la tela con un aro de bordado o con imperdibles.
2. Zurza área deseada.
3. Al terminar jale suavemente o recorte el exceso de Sol-U-Film™. Para retirar el resto del estabilizador, sumerja el bordado por 30 segundos a 2 minutos en agua. Seque con la plancha utilizando una tela de planchado.




Método Alternativo

- Plancha el bordado entre dos piezas de papel toalla o telas de planchado que estén húmedas.

SUGERENCIAS:

- Para ser utilizado como estabilizador liquido o adhesivo temporal, disuelva 1 yarda de Sol-U-Film™ en 8 onzas de agua y aplique a la tela.
- Para mayor firmeza utilice 2-3 capas del estabilizador, seque con plancha usando telas de planchado.

PELLON PROJECTS:

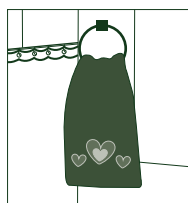

Proyecto: Toalla Corazón de mi Corazón
Diseñadora: Alexandra Henry
Nivel: Principiante

Añada un toque de amor a su tocador con esta linda toalla de manos. Obtenga este patrón y otras ideas para manualidades en www.PellonProjects.com

MAS IDEAS PARA PROYECTOS:

Utilice Sol-U-Film™ en proyectos para:

- **Artesanías y Decoración del Hogar:** Patrón para acolchados, monogramas y bordados decorativos.

Contenido de Fibra:

100% PVA (Poly Vinyl Alcohol), Acid Free

Instrucciones de Mantenimiento:

100% Soluble en agua de cualquier temperatura

Para mayor información visite www.pelloninstructions.com

Para proyectos gratis de este y otros productos de Pellon® visite www.PellonProjects.com o llame al 1-800-223-5275.

