

pellon[®]

*The Magic
in the Middle*

Embroidered Lutradur Checkbook Cover Skill Level: Intermediate

Designed by
Alexandra Henry
Made by
Alexandra Henry
and
Charlene Allison



Embroider Pellon[®] Lutradur[®] and make this unique checkbook cover. Two pockets hold the checks and the register. One flap makes it easy to write carbon checks. Another flap helps open the register to the last used page. Sample was made using a Bernina 830LE and used the HE805_48 Snowflake Border design from the Holiday Linen collection.

Materials Needed

Pellon [®] 1020 Lutradur [®] Black	1/2 yard
Pellon [®] 809 Décor Bond [®]	1/2 yard
Pellon [®] 371R Fuse-N-Tear [™]	10" square
Embroidery Thread	
White Chalk Marker or Disappearing White Pen	

Tools Needed

- Rotary Cutting tools and mat
- Ruler
- Embroidery Sewing Machine

Graphic Artist Alexandra Henry

Cutting and Assembly Instructions

From the black Lutradur® and the Décor Bond®:

- Cut one 10" square of black Lutradur® only.
- Cut 6 5/8" x 7" of Décor Bond® only .
- Cut one 3 1/2" x 6 5/8" rectangle.
- Cut one 3 1/4" x 6 5/8" rectangle.
- Cut one from top flap template (see template page).
- Cut one from bottom flap template (see template page).

Fuse the Fuse-N-Tear™ to one side of the 10" square of Lutradur®. Embroider design in the center of the 10" square. Pick a design that is no larger than 4 1/2" x 2" to make sure it will fit on one side of the checkbook cover.




Tear off stabilizer.




Press Embroidered design and the Lutradur® to flatten.



Using the white chalk marker, mark the finished front dimensions of the checkbook cover on around the embroidered design, centering the embroidery (6 3/8" x 3 3/8").

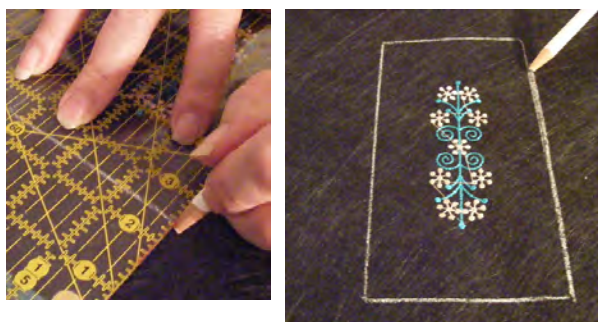


Mark the back cover of the checkbook as same as the front cover (6 3/8" x 3 3/8").

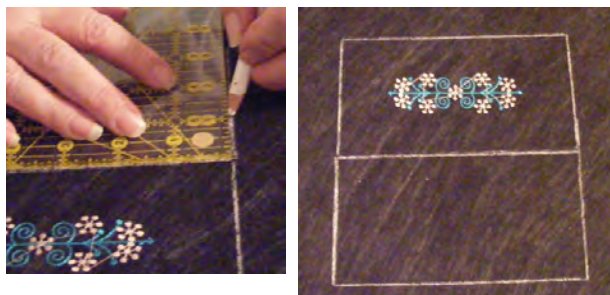


Rotary cut 1/8" around the outside drawn line.


NOTE: DO NOT CUT THE LINE ACROSS THE MIDDLE OF THE CHECKBOOK

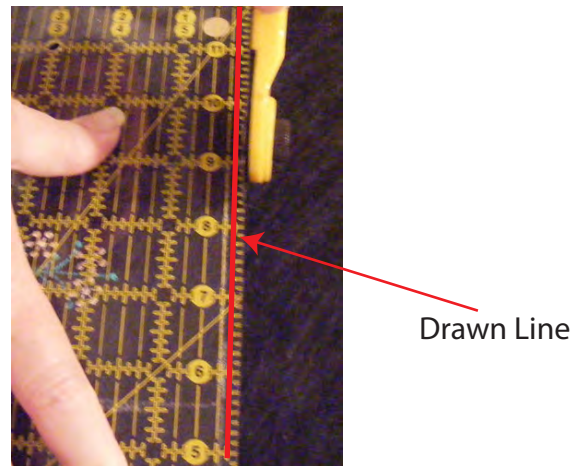

Fuse Décor Bond® to each corresponding piece of Lutradur®. Satin stitch on one long edge of both pockets, and the curved edge of the top and bottom flaps.

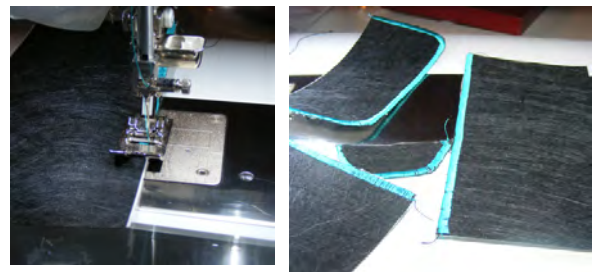

Layer the pockets and flaps on the inside of the checkbook cover. Stitch 1/8" from edge around entire checkbook cover.

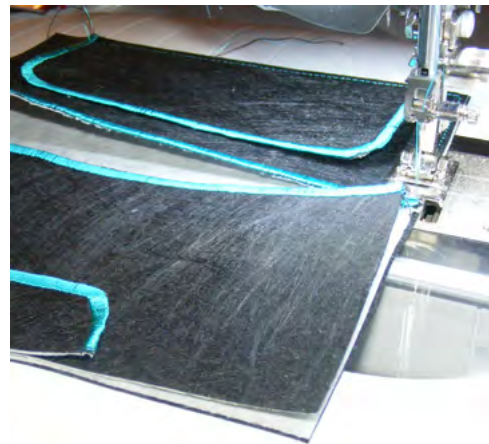


Place three rows of straight stitch on the drawn line between the front and the back of the checkbook cover.



Satin stitch on the outside of the checkbook cover around the complete edge.



Top and Bottom Flaps for Checkbook Cover

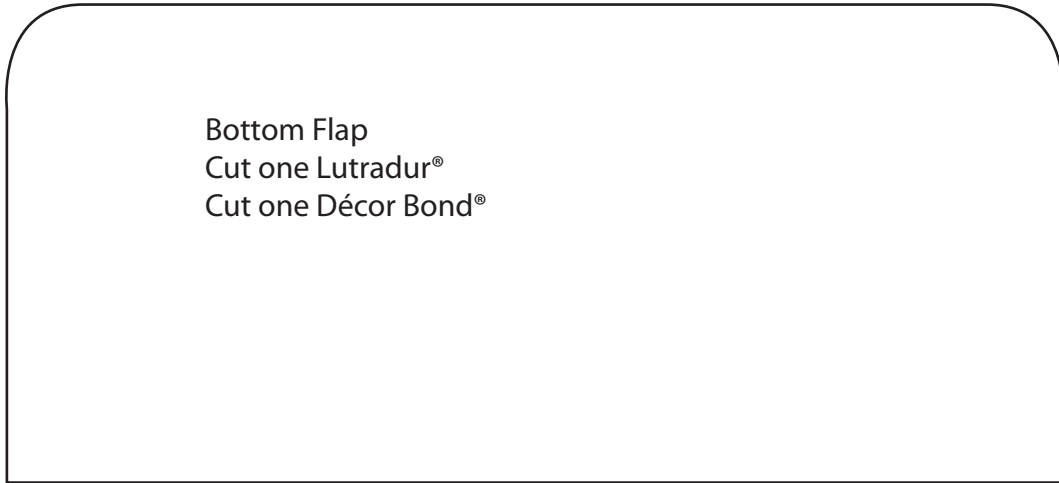

Graphic Artist Alexandra Henry

PERMISSION IS GIVEN TO REPRODUCE FOR PERSONAL USE ONLY ©2011 - PCP Group, LLC