

pellon

*The Magic
in the Middle*

Mod Kitchen Set Skill Level: Beginner

Designed By

Cheryl Bush

www.sewcando.blogspot.com



This Six piece, coordinated kitchen set includes a reversible half apron with sewn-in hot pad pockets, two heat resistant tabletop trivets, two appliqued tea towels and an insulated casserole carrier. Perfect for preparing and serving hot meals with ease and style.

Fabrics Needed

Coordinating cotton prints 1 yard each of three fabrics, outer fabric, sash fabric, inner fabric

Materials Needed

Pellon® Insul-Fleece™ 975	1 yard
Legacy by Pellon Rayon Batting	1 yard
Pellon® 805 Wonder-Under®	1/4 yard
Cotton Tea Towels (28" x 28")	2
Thread	
Snaps	2

Tools Needed

Sewing Machine and related supplies
Rotary cutting tools and supplies
Pencil
Marking Pen
Press Cloth

Graphic Artist Alexandra Henry

PERMISSION IS GIVEN TO REPRODUCE FOR PERSONAL USE ONLY ©2011 - PCP Group, LLC

Cutting and Assembly


Cut pieces following the instructions on the template page and the Tru-Grid Layout page.



Place inner and outer apron fabric right sides together. Lay the Pellon Fire Retardant Rayon batting on one side. Pin layers together. Stitch along sides and bottom with a 1/2" seam allowance, leaving top edge open. Trim seams with pinking shears, then turn right side out.



Sew one 6" end of the short sash piece to one 6" end of both long sash pieces.

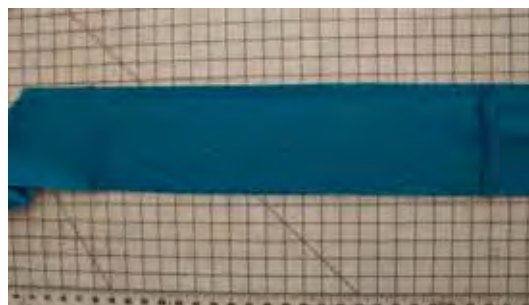


Place sash on apron as shown, matching raw edges.



Turn in opposite raw edge of center sash piece 1/4". Press.




Fold the long pieces of sash lengthwise, right sides together. Stitch using a 1/4" seam allowance, stopping at the center sash piece. Trim seams.

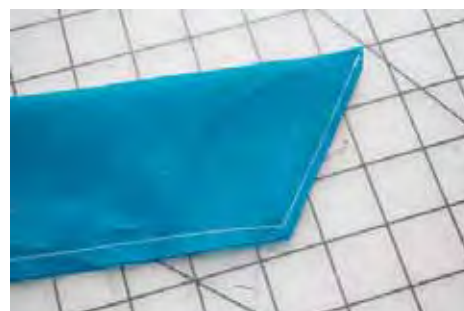

Turn sash right side out, using a tool to poke out the pointed ends. Fold center sash piece over raw edges of apron. Pin in place. Top stitch sash with a 1/8" seam allowance.




Layer the pocket pieces as follows: fabric circles, right sides together, one layer of Rayon Batting, two layers of Pellon® Insul-Fleece™, one layer of Rayon Batting. Stitch all layers together with a 1/2" seam allowance, leaving a 1" gap for turning. Clip around the edge with pinking shears. Turn right side out. Press to flatten, then turn in open edge.

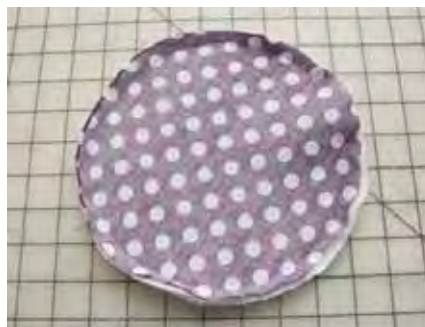

Pin each pocket to the lower section of the apron front, along markings. Mark edges where the circle portion of the markings stop. This indicates where to start and stop stitching for the pocket openings. Make sure the open edge of the pocket is in the area to be sewn.



Top stitch pockets in place using a 1/8" seam allowance.

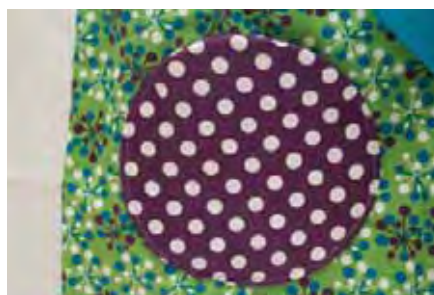

Mod Tabletop Trivet

Use large circle pieces. Layer as follows: One piece outer fabric, right side facing down, one layer of Rayon Batting, two layers Pellon Insul-Fleece, one piece Rayonbatting and inner fabric, right side facing up. Make two.



Baste layers together with a 1/4" seam allowance. Trim raw edges. Encase the raw edge of the circle with the double fold bias tape. Stitch close to the edge of the bias tape. Overlap and fold the raw edge of the bias tape when back at the beginning point. Repeat for other trivet.



Appliqued Tea Towels

Place the rough side of Wonder-Under on the wrong side of both fabric strips and the circles. Fuse. Peel paper off when cool.



Place strips of fabric, Wonder-Under side down, one inch above the bottom hem, with towels and fabrics right side up. Fuse into place following manufacturer's instructions.



Place one medium and one small circle on a diagonal in the center of the fabric strip. Fuse into place.



Use a contrasting color thread stitch along the edge of the fabric strip with a medium zigzag stitch around the entire rectangle.



Satin stitch around the circles.




Place strips of fabric, Wonder-Under side down, one inch above the bottom hem, with towels and fabrics right side up. Fuse into place following manufacturer's instructions.



Casserole Carrier

Mark location for the carrier straps following placement on the TruGrid pattern piece.

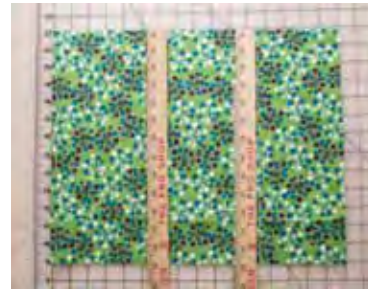

Fold straps in half lengthwise with right sides facing. Stitch using a 1/8" seam allowance. Turn right side out, pushing out point with a tool. Topstitch 1/8" from edge. Repeat with other strap.



Center and pin straps in place along the markings on the outer fabric.



Sew into place over the topstitching, starting and stopping 1/2" from both ends.



Place Rayon Batting on wrong side of the outer fabric and fold on the fold line with right sides of outer fabric together. Make sure the straps are pushed into the middle out of the way and stitch the long sides together with a 1/2" seam allowance.



Pull corners to a point and mark a line 1" from the tip. Sew across the line. Trim excess fabric. Turn carrier right side out and set aside.



Place the Insul-Fleece on the wrong side of the carrier's lining fabric and fold in half on the fold line with the right sides of the lining fabric together.



Sew the long sides together using a 1/2" seam allowance. Pull corners to a point and mark a line 1" from the tip. Sew across the line. Trim excess fabric.



Insert lining into outer carrier.



Fold raw edges of both the carrier and liner in 1". Pin into place. On the bottom side (where straps are attached), mark the center of the pinned edge.



Stack flap pieces in the following order: Insul-Fleece, lining (right side up), outer fabric (right side down), Rayon Batting.



Sew around the curved side with a 1/2" seam allowance, leaving top edge open. Trim seam and turn right side out. Press.



Mark the center of the unfinished edge. Line up the mark on the flap with the mark on the carrier. Insert flap between the carrier layers and pin into place. Sew around carrier top, catching the flap in the layers with a 1/4" seam allowance.



Mark snap settings on flap, 1" in from end of flap and 2" in from each side. Mark snap settings on carrier 3 1/4" in from the side seams and 2 1/2" in from top edge of carrier.




Set male portion of the snaps on flap and female portion of snaps on the carrier according to manufacturer's instructions.



To connect straps, fold end with raw edge under 1/4" and bring ends of straps together, overlapping 1/4". Sew together with two rows of double stitches 1/8" apart.



Mod Kitchen Set TruGrid Layout

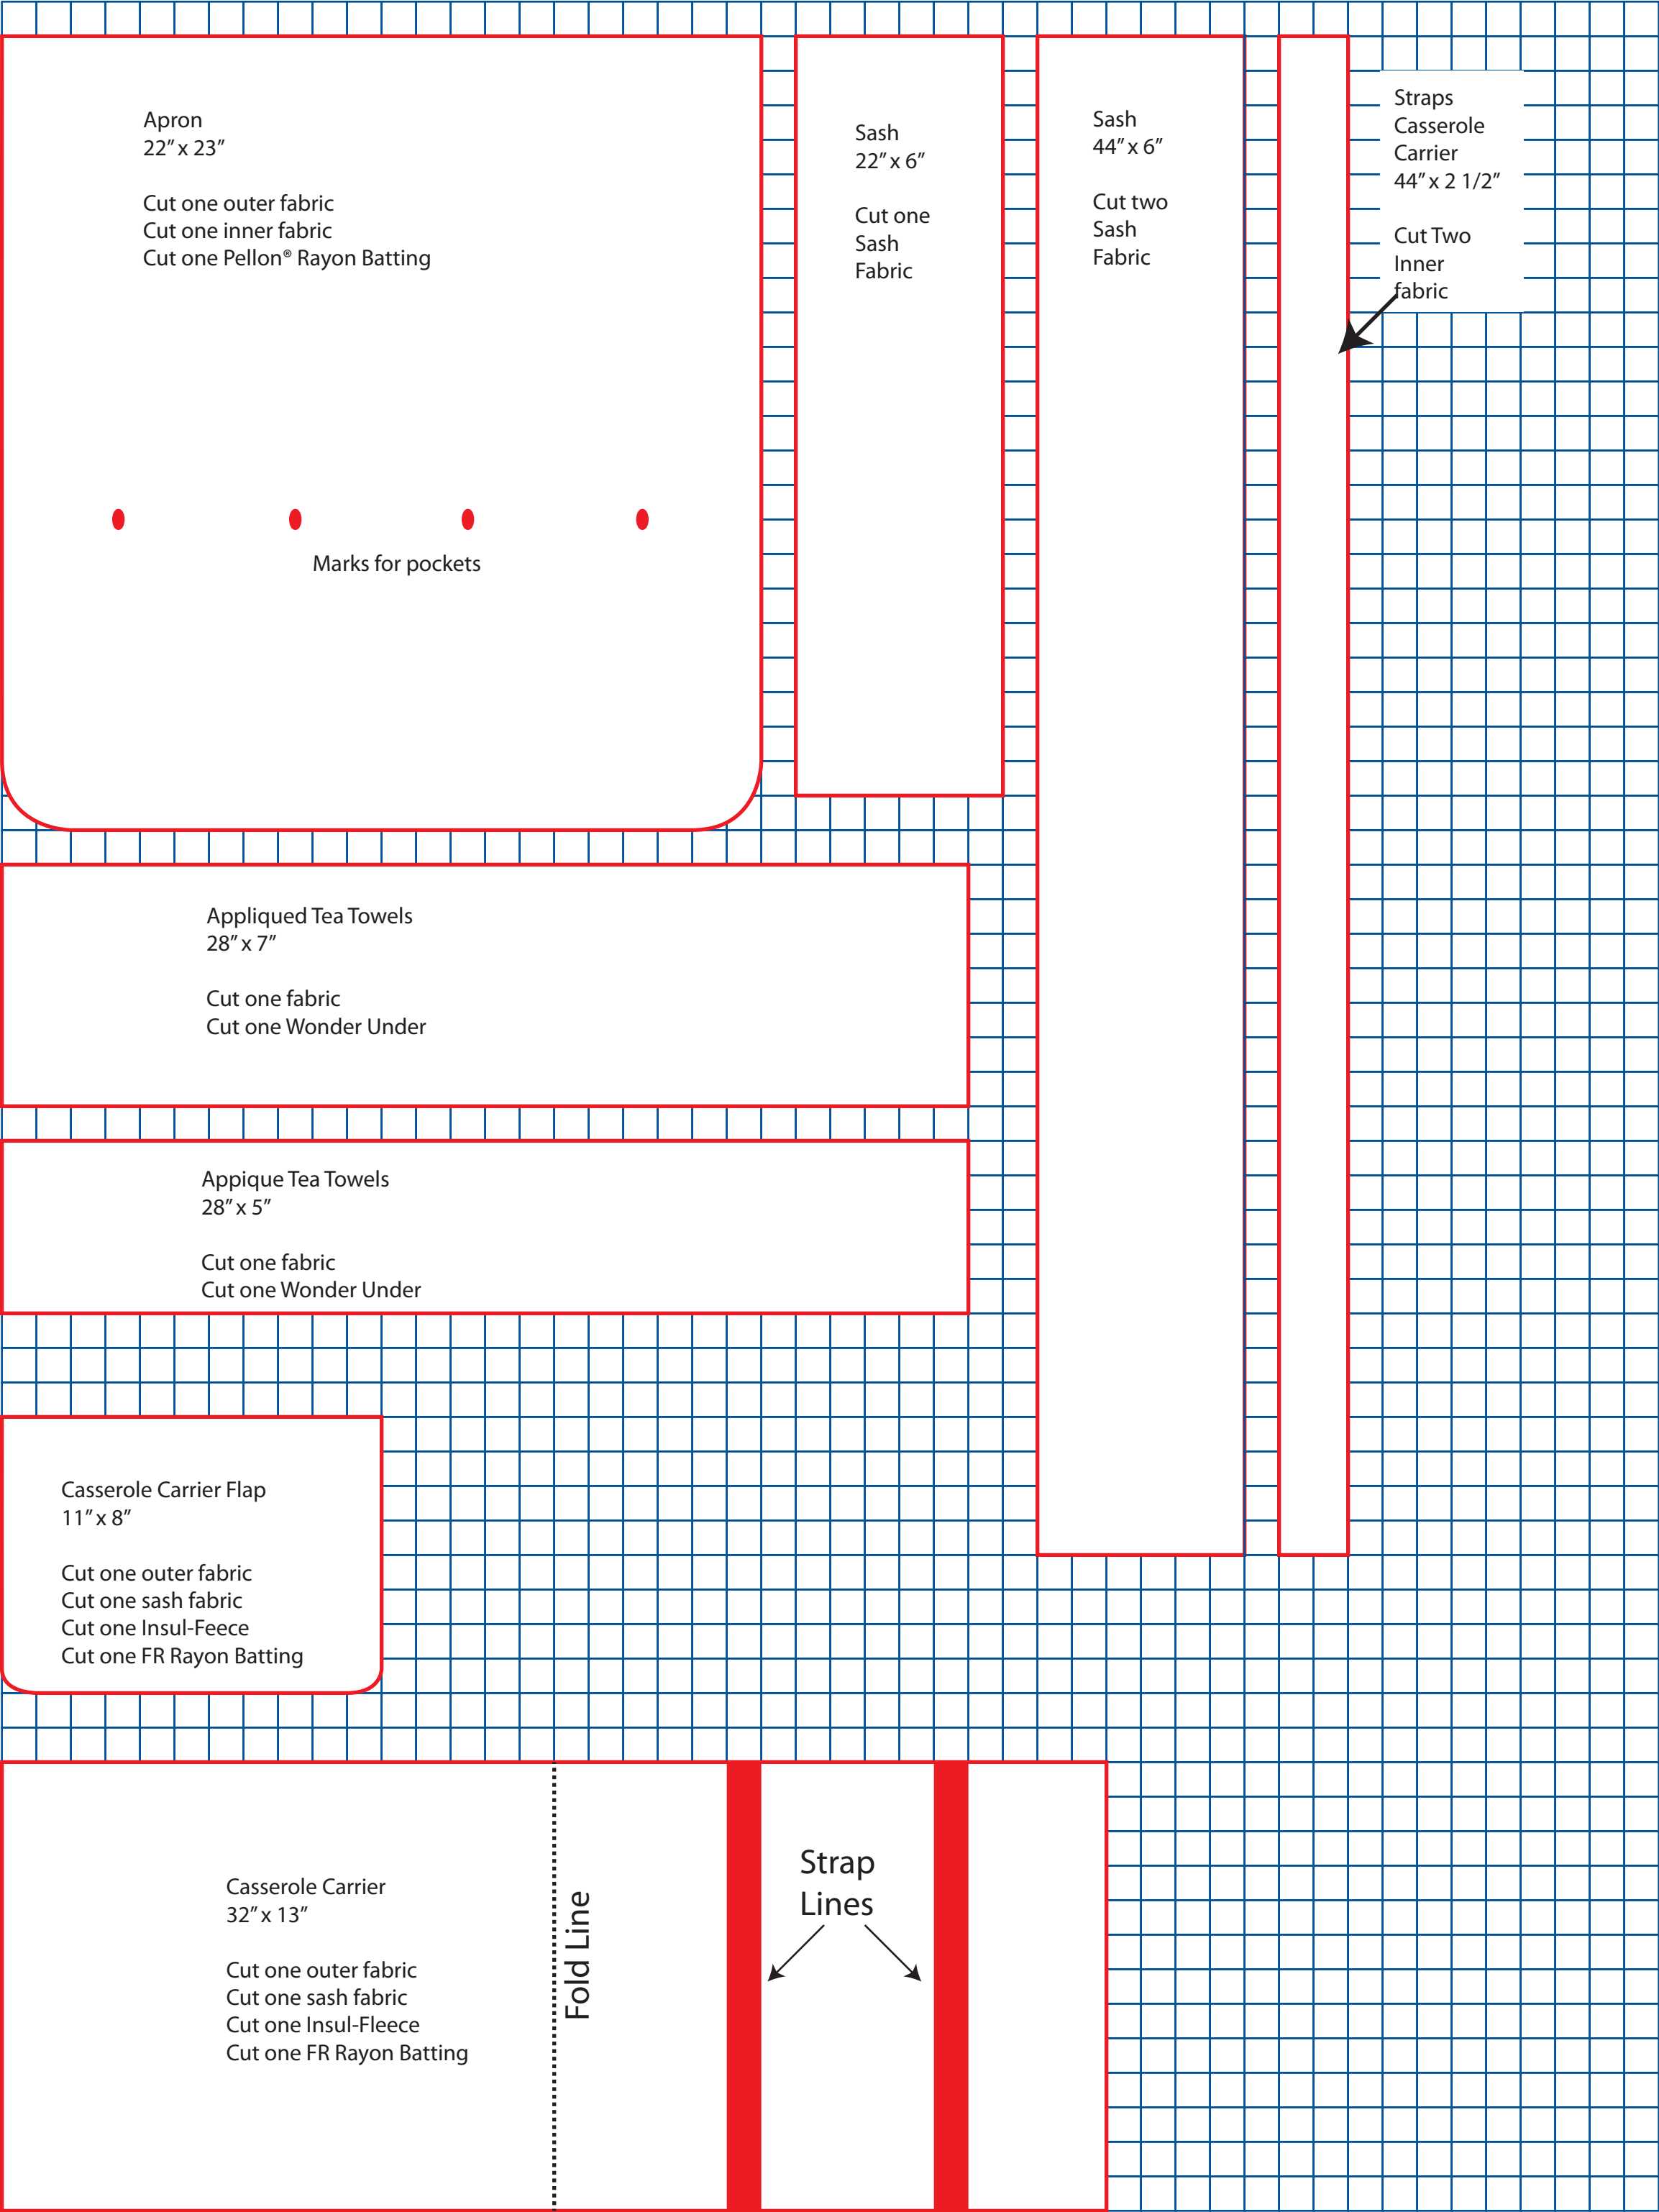

Kitchen Set Templates

Pocket and Trivets

7 3/4" Circle

Pocket:

Cut four inner fabric

Cut four Insul-safe fleece

Cut two Flame Retardant Rayon

Trivets:

Cut two from outer fabric

Cut two inner fabric

Cut four Insul-Fleece

Cut four FR Rayon

